


## MICROPILE INSTALLATION SEQUENCE

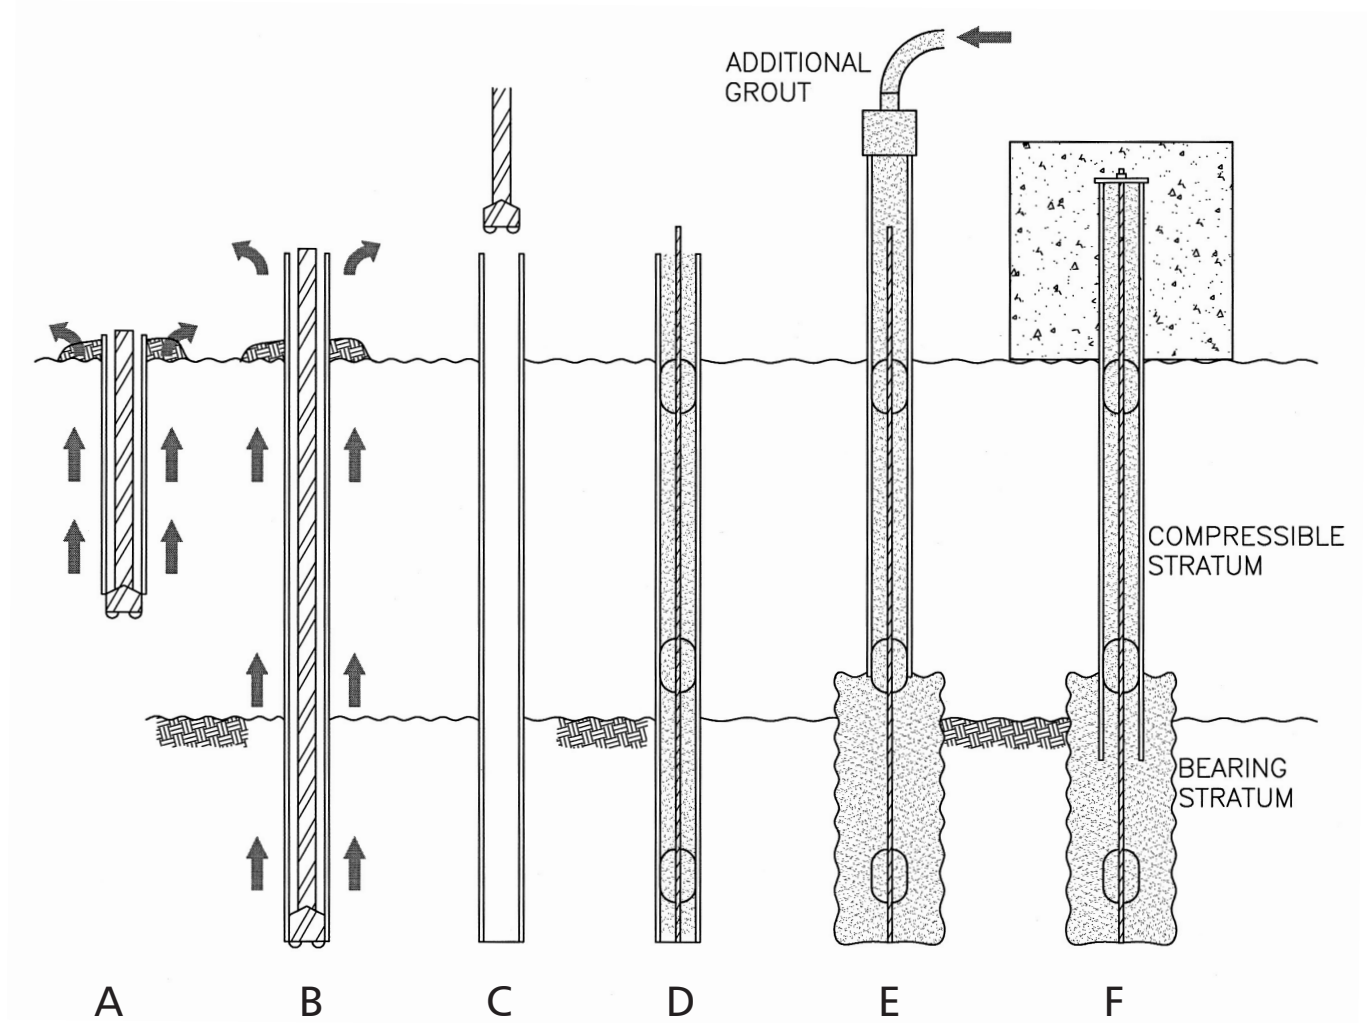

- A. Drill or install temporary casing.
- B. Complete drilling to design depth or into competent horizon.
- C. Remove drill bit and rods.
- D. Place reinforcement and grout by tremie technique.
- E. Remove temporary casing and inject further grout under pressure, as required.
- F. Complete pile (casing may be left in place through compressible stratum).